

Before



After



Mortise lock

Rim lock

Deadbolt lock

Ensure that your door meets the criteria below:

1. Door material & thickness

Models	Measurements (mm)
K20 Pro Max	38 - 120
Q9	
K9-5W	
M9	
L7	
RX-C	35-50
R8	30-50
R8L	10-12




2. Gap between door & gate

Models	Measurements (mm)
K20 Pro Max	>58
Q9	>75
K9-5W	>72
M9	>71
L7	>77
RX-C	>31
R8	>55
R8GD	>71
R8L	4-6



3. Clearance from the edge of the door
(If your door has a handlebar or protruding trim)


Models	Measurements (mm)
K20 Pro Max	100
Q9	100
K9-5W	103
M9	Handlebar - 173 Trim - 95
L7	Handlebar - 194 Trim - 97
RX-C	94
R8	80

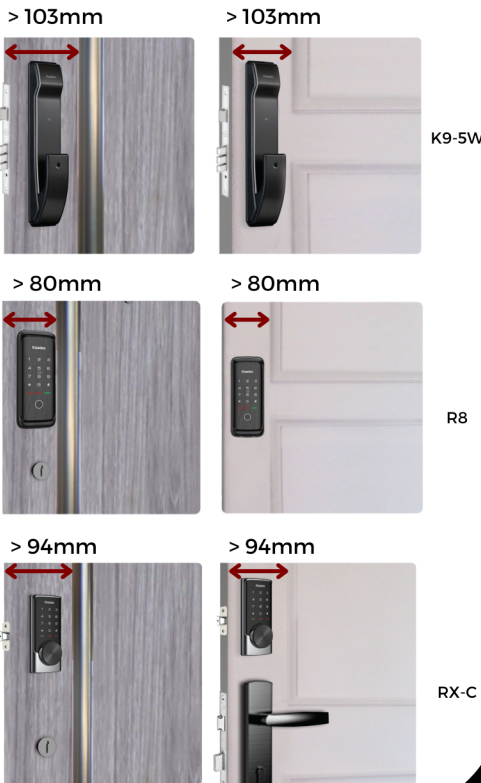

Only when installing R8 - rim locks

4. Door frame

Models	Measurements (mm)
R8	>30

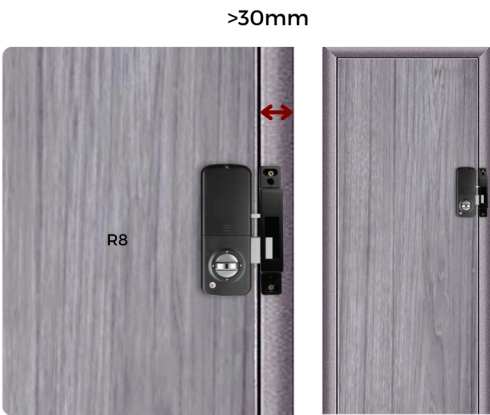

Gate Lock Before



After



Ensure that your gate meets the criteria below:

1. Gate material & thickness



25-50mm



2. Gap between door & gate



>71mm



2. Flat surface on gate

For gates with limited surface area or to retain the door handle, install a metal plate for an additional S\$60.

> 100 (W) x
230mm (H)



Metal Plate

